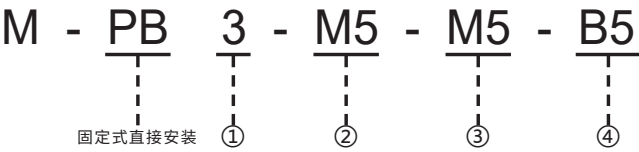


型式表示方法



①适用吸盘规格

代码	3			4		5	7
适用吸盘规格	M-P5AF	M-P8J	M-P20BA	M-P20BF	M-P40J	M-P60F M-P80F M-P95F M-P60J M-P70J M-P80J	M-P90C
	M-P6AF	M-P10AA	M-P5C	M-P25F	M-P50J		
	M-P8AF	M-P15AA	M-P7C	M-P30F	M-P25BA		
	M-P10AF	M-P20AA	M-P10C	M-P40F	M-P30BA		
	M-P15AF	M-P10BA	M-P15C	M-P50F	M-P30C		
	M-P6J	M-P15BA	M-P20C	M-P30J	M-P40C		
				M-P35J	M-P60C		

注：也可根据吸盘连接处螺纹规格适配对应螺纹规格的吸盘 + 螺钉组合。

②安装螺纹规格

代码	说明	3	4	5	7
M5	内螺纹 M5X0.8	●	—	●	—
M6	内螺纹 M6X0.1	—	●	—	—
M16	内螺纹 M16X1.5	—	—	—	●

③吸盘连接处规格

代码	说明	3	4	5	7
M5	内螺纹 M8X0.75	●	—	—	—
M6	内螺纹 M6X1	—	●	—	—
M10	内螺纹 M10X1.5	—	—	●	—
M12	内螺纹 M12X1.25	—	—	—	●

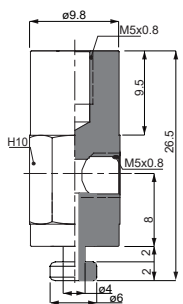
④真空接口规格

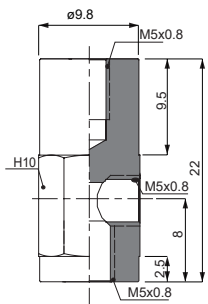
代码	说明	3	4	5	7
B5	内螺纹 M6X1	●	●	●	—
B01	G1/8	—	—	—	●

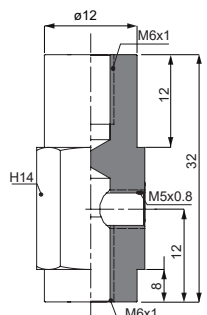
M- 托架

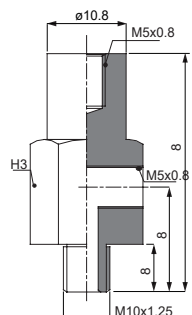
Series

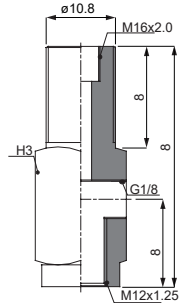
固定式侧面真空端口 -PB

型号	M-PB3-M5-B5
※ 真空接口规格	
	
适用吸盘规格	
M-P5AF	M-P15AA
M-P6AF	M-P20AA
M-P8AF	M-P10BA
M-P10AF	M-P15BA
M-P15AF	M-P20BA
M-P6J	M-P5C
M-P8J	M-P7C
M-P10AA	

型式	M-PA3-M8-M5-B5
	
适用吸盘规格	
M-P10J	
M-P15J	
M-P10C	
M-P15C	
M-P20C	

型号	M-PB4-M6-M6-B5
	
适用吸盘规格	
M-P20BF	M-P40J
M-P25F	M-P50J
M-P30F	M-P25BA
M-P40F	M-P30BA
M-P50F	M-P30C
M-P30J	M-P40C
M-P35J	M-P60C

型式	M-PB5-M5-M10-B5
	
适用吸盘规格	
M-P60F	
M-P80F	
M-P95F	
M-P60J	
M-P70J	
M-P80J	

型号	M-PA7-M16-M12-B01
	
适用吸盘规格	
M-P90C	