

型式表示方法

M - PA 3 - M8 - M5 - B5

固定式直接安装 ① ② ③ ④

①适用吸盘规格

代码	1	3	4	5
适用吸盘规格	M-P1.5AF M-P2AF M-P3.5AF M-P4J	M-P5AF M-P8J M-P20BA M-P6AF M-P10AA M-P5C M-P8AF M-P15AA M-P7C M-P10AF M-P20AA M-P10C M-P15AF M-P10BA M-P15C M-P6J M-P15BA M-P20C	M-P20BF M-P40J M-P25F M-P50J M-P30F M-P25BA M-P40F M-P30BA M-P50F M-P30C M-P30J M-P40C M-P35J M-P60C	M-P60F M-P80F M-P95F M-P60J M-P70J M-P80J

注：也可根据吸盘连接处螺纹规格适配对应螺纹规格的吸盘 + 螺钉组合。

②安装螺纹规格

代码	说明	1	3	4	5
M6	内螺纹 M6X0.1	●	—	—	—
M8	内螺纹 M8X0.75	—	●	—	—
M10	内螺纹 M10X1.5	—	—	●	—
M16	内螺纹 M16X1.5	—	—	—	●


③吸盘连接处规格

代码	说明	1	3	4	5
M5	内螺纹 M8X0.75	—	●	—	—
M6	内螺纹 M6X1	—	—	●	—
M10	内螺纹 M10X1.5	—	—	—	●


④真空接口规格

代码	说明	1	3	4	5
4B	笋型接头 Ø4x2.5	●	—	—	—
B5	内螺纹 M6X1	—	●	●	—
B01	内螺纹 M10X1.5	—	—	—	●


型号	M-PA1-M6-4B
※ 真空接口规格	
适用吸盘规格	M-P1.5AF M-P2AF M-P3.5AF M-P4J

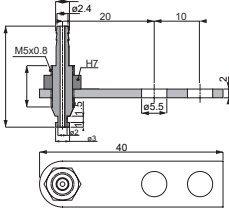

型式	M-PA3-M8-M5-B5
适用吸盘规格	M-P5AF M-P8J M-P20BA M-P6AF M-P10AA M-P5C M-P8AF M-P15AA M-P7C M-P10AF M-P20AA M-P10C M-P15AF M-P10BA M-P15C M-P6J M-P15BA M-P20C

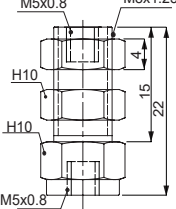

型号	M-PA4-M10-M6-B5
适用吸盘规格	M-P20BF M-P40J M-P25F M-P50J M-P30F M-P25BA M-P40F M-P30BA M-P50F M-P30C M-P30J M-P40C M-P35J M-P50C

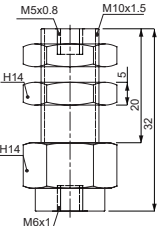

型式	M-PA5-M16-M10-B01
适用吸盘规格	M-P60F M-P80F M-P95F M-P60J M-P70J M-P80J

