

◎ 弹簧缓冲支架 -K10

产品选型：

K10 - J 10 - M5F - B5

连接螺纹 M10×1 行程 真空端口 M5×0.8

回转方式

代码	回转方式
J	可回转
K	防回转


行程

代码	行程 mm
6	6
10	10
20	20
30	30
40	40
50	50

吸盘端口处连接规格

代码	规格
M5F	内螺纹 M5×0.8
M5M	外螺纹 M5×0.8
M6M	外螺纹 M6×1


吸盘端口 - 内螺纹：

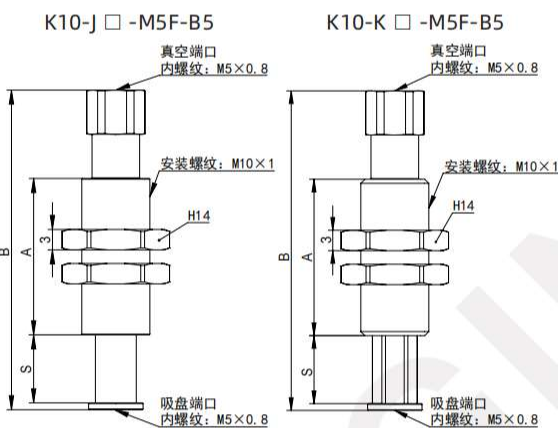

单位：mm

规格型号	参数							回转方式
	行程 S	B	A	安装螺纹	吸盘端口处连接规格	真空接口规格	弹簧力度 N	
K10-J6-M5F-B5	6	43	23	M10x1	M5x0.8	M5x0.8	2~4	J
K10-J10-M5F-B5	10	47	23	M10x1	M5x0.8	M5x0.8	2~4	
K10-J20-M5F-B5	20	85	51	M10x1	M5x0.8	M5x0.8	2~4	
K10-J30-M5F-B5	30	95	51	M10x1	M5x0.8	M5x0.8	2~4	
K10-J40-M5F-B5	40	131	77	M10x1	M5x0.8	M5x0.8	2~4	
K10-J50-M5F-B5	50	141	77	M10x1	M5x0.8	M5x0.8	2~4	K
K10-K6-M5F-B5	6	43	23	M10x1	M5x0.8	M5x0.8	2~4	
K10-K10-M5F-B5	10	47	23	M10x1	M5x0.8	M5x0.8	2~4	
K10-K20-M5F-B5	20	85	51	M10x1	M5x0.8	M5x0.8	2~4	
K10-K30-M5F-B5	30	95	51	M10x1	M5x0.8	M5x0.8	2~4	
K10-K40-M5F-B5	40	131	77	M10x1	M5x0.8	M5x0.8	2~4	
K10-K50-M5F-B5	50	141	77	M10x1	M5x0.8	M5x0.8	2~4	

吸盘端口 - 外螺纹：

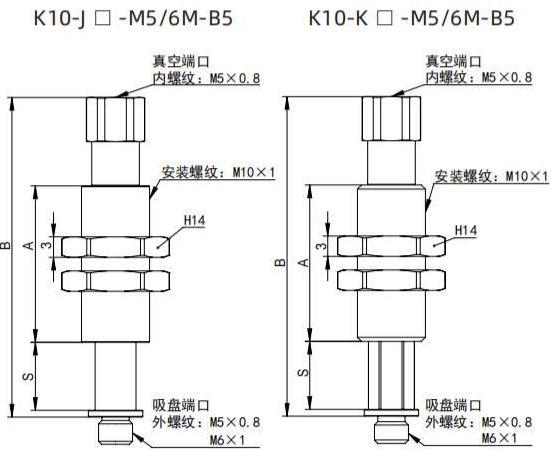

单位：mm

规格型号	参数							回转方式
	行程 S	B	A	安装螺纹	吸盘端口处连接规格	真空接口规格	弹簧力度 N	
K10-J6-M5/6M-B5	6	43	23	M10x1	M5x0.8/M6x1	M5x0.8	2~4	J
K10-J10-M5/6M-B5	10	47	23	M10x1	M5x0.8/M6x1	M5x0.8	2~4	
K10-J20-M5/6M-B5	20	85	51	M10x1	M5x0.8/M6x1	M5x0.8	2~4	
K10-J30-M5/6M-B5	30	95	51	M10x1	M5x0.8/M6x1	M5x0.8	2~4	
K10-J40-M5/6M-B5	40	131	77	M10x1	M5x0.8/M6x1	M5x0.8	2~4	
K10-J50-M5/6M-B5	50	141	77	M10x1	M5x0.8/M6x1	M5x0.8	2~4	K
K10-K6-M5/6M-B5	6	43	23	M10x1	M5x0.8/M6x1	M5x0.8	2~4	
K10-K10-M5/6M-B5	10	47	23	M10x1	M5x0.8/M6x1	M5x0.8	2~4	
K10-K20-M5/6M-B5	20	85	51	M10x1	M5x0.8/M6x1	M5x0.8	2~4	
K10-K30-M5/6M-B5	30	95	51	M10x1	M5x0.8/M6x1	M5x0.8	2~4	
K10-K40-M5/6M-B5	40	131	77	M10x1	M5x0.8/M6x1	M5x0.8	2~4	
K10-K50-M5/6M-B5	50	141	77	M10x1	M5x0.8/M6x1	M5x0.8	2~4	